


INSTALLATION:



Cut hole size for desired dispenser. To determine proper hole diameter refer to letter "E" of specifications.

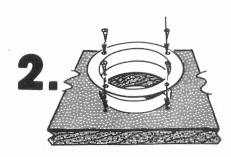

Fasten mounting ring securely over hole with the supplied mounting hardware.

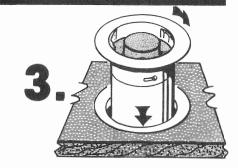

Place dispenser into hole. Align ear tabs on dispenser to openings on mounting ring. Rotate dispenser one quarter turn clockwise to secure to counter.

NOTE: This unit is self supported by mounting ring. No additional support is needed when mounting in a horizontal position.

ADJUSTMENT



by rotating counterclockwise cups into dispenser. and pulling from hole.



Remove dispenser from counter Loosen locking screw, and load



Turn collar counterclockwise until adjustment clips hold cups firmly in place. Tighten locking screw. DO NOT BEND CLIPS BY HAND!

NOTE: For proper operation, cups should dispense from middle of adjustment clips.


MAINTENANCE:



Remove spring assembly by rotating plastic base clockwise until tabs are released from window. Pull bottom out carefully.




Remove spring and cup holder., Wash all parts with warm soapy water to remove dirt and wax build up. Do not bend the adjustment clips by hand.

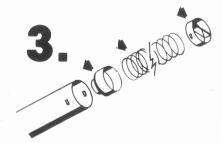


Reassemble unit by inserting cup holder, spring and bottom, making sure tabs snap into windows. Be sure to check adjustment before reinstalling.

COUNTER MOUNT-TYPE CUP DISPENSERS

DISPENSER

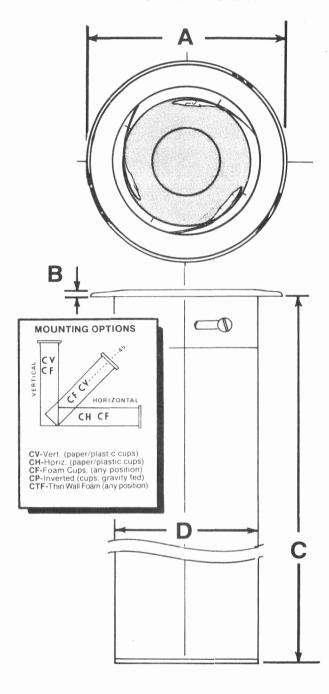

MOUNTING RING

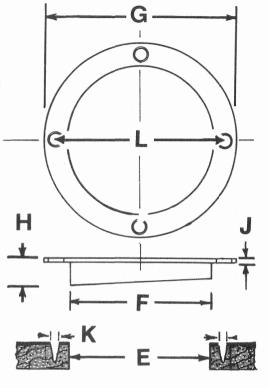

	C3200C-SERIES	C3400C-SERIES	C3500C-SERIES
COUNTER FLANGE DIAMETER	5 3/8"	5 7/8"	6 7/8"
Α	137 mm	149 mm	174 mm
COUNTER FLANGE HEIGHT	9/32"	9/32"	9/32"
В	7 mm	7 mm	7 mm
TUBE LENGTH	23 1/2"	23 1/2"	23 1/2"
C	597 mm	597 mm	597 mm
TUBE DIAMETER	3 25/32"	4 9/32"	5 9/32"
D	96 mm	109 mm	134 mm
COUNTER HOLE DIAMETER	4 3/16"	4 11/16"	5 11/16"
E	106 mm	119 mm	144 mm
MOUNTING RING FLANGE DIAMETER	4 1/8"	4 5/8"	5 9/16"
F	105 mm	117 mm	141 mm
NOUNTING RING OUTSIDE DIAMETER		5 5/8"	6 5/8"
G	130 mm	143 mm	168 mm
MOUNTING RING DEPTH	17/32"	17/32"	17/32"
Н	13 mm	13 mm	13 mm
MOUNTING RING HEIGHT	1/16"	1/16"	1/16"
J	2 m n	2 mm	2 mm
HOUNTING RING SCREW HOLE DIA	1/8"	1/8"	1/8"
K	3 mm	3 mm	3 mm
CENTER TO CENTER	4 5/8"	5 5/32"	6 1/8"
L	117 mm	131 mm	156 mm